

RC/GS and RC7 User's Menu Summary

System Status Messages

AC Source	Inverter Mode	Charger Mode	Error Mode
System Status: Waiting AC	System Status: Searching	System Status: Bulk Charging	System Status: Otemp/Less Load
System Status: AC Available	System Status: Inverting	System Status: Absorption Chrg	System Status: Overload
		System Status: Float Charging	System Status: Hi Bat/Stop Chrg
		System Status: Equalizing	System Status: Lo Bat/Start Chrg

Generator Status Messages (RC/GS Only)

AC Source	Inverter Mode	Charger Mode	Error Mode
Genset Status: Pending Genstart	Genset Status: MAN STOP ONLY		Genset Status: Gen Wont Start
Genset Status: Pending Gen Stop			Genset Status: Gen Quiet Fault
Genset Status: Cranking Genset			
Genset Status: Starter Cooldown			

RC/GS and RC7 User's Menu Summary

System Status Display

Batt State of Charge E ----- F	
Set Shore Power: X.X Amps	
Gen Start/Stop: Press (ON/OFF)*	* RC/GS only

Meters Display

Avg Shunt Amps: +/- 0 Amps DC
Battery: 00.0 Volts DC
Inv/Chg Current: +/- 0 Amps DC
Inverter Output: VAC 0
AC Input: 0 Amps AC